

FINGERTEC



ADD REMOTE

FINGERTEC[®] TERMINAL(S) USING USB FLASH DISK
SUGGESTIONS & SOLUTIONS FOR TCMS V2


FingerTec® AC100 Plus and AC800 Plus both come with USB port. User may utilise the USB port to:

1. download user information from a reader to a USB flash disk
2. download the attendance log from a reader to a USB flash disk
3. upload user information from a USB flash disk to a reader

You need to configure the settings in FingerTec® Terminal Settings to perform those function mentioned above. USB flash disk function. Please follow the steps shown below for setup.


Step 1

Click the Add button to add a new terminal.

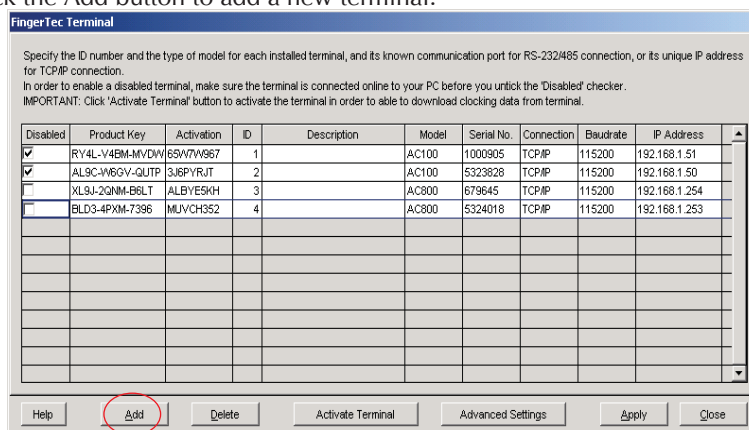

Step 2


Enter the Product key when prompted with the dialog box as shown below.

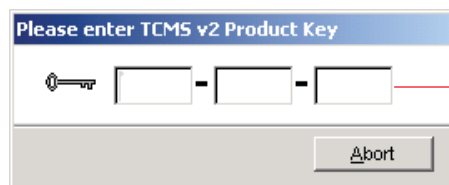

You need to enter the Product Key as printed on the software installation CD.

Step 3

Select the correct settings in Terminal setting.

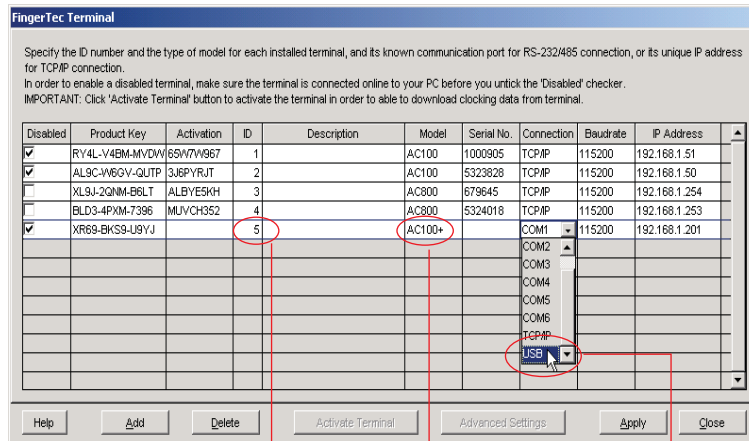


Please make sure this is the correct device number, which is pre-configured in the reader. For example, the device number is 5, therefore the ID number must be 5 too.

Please make sure you choose the correct model, it is either AC100+ nor AC800+.

Please choose for USB in this column to enable the USB flash disk function.

Step 4


Enter in the serial number of the reader.

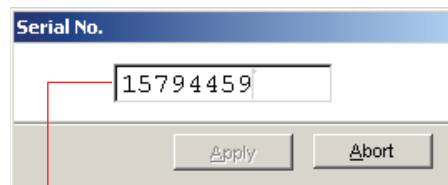

Please enter the serial number as printed on the reader or on the software CD.

Step 7

Select USB flash disk management.

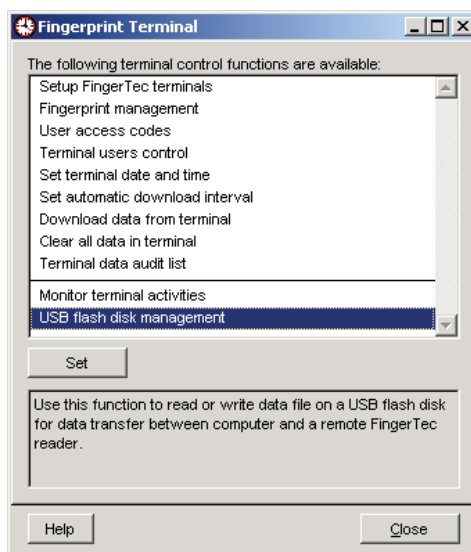

Remark :

1. Please always make sure the following keys are matching with one another.
 - a. Serial number of reader
 - b. Product key
 - c. Activation key

Attendance data would not be downloaded if any of these keys / number is invalid or not matching.

2. Please always make sure the device number, which is pre-configured in the reader is the same as the ID configured in TCMS V2. The wrong device number or ID can create unnecessary trouble during the attendance data downloading.